
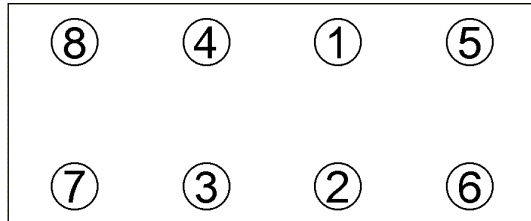


<b>Anziehvorschrift für Zylinderkopf</b>	<b>540.470</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Mitsubishi</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/ \* 30 Nm  
Tightening/ 70 Nm  
Serrage/ 110 Nm  
Apriete

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mitsubishi MC 6G72 V6 3,0 ltr.  
104 KW - 210 KW 11.88-04.00  
Sigma/ Pajero I/ Pajero II/ 3000 GT 24V 4x4

MC G6AT 3,0 ltr.  
Mitsubishi Galloper 3,0 ltr.V6 02.99- 104 KW  
Hyundai Sonata I 3,0i 16V 01.91-10.93 107 KW  
Hyundai Sonata II 3,0i 16V 05.93-06.98 107 KW

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*540.470\***