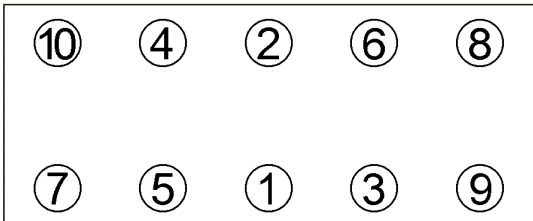


Anziehvorschrift für Zylinderkopf		693.553 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 802.910 M 11 x 121				
Anziehen/ Tightening/ Serrage/ Apriete		* 30 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 70,2 mm; $\frac{1}{2}$: 1,00 mm				
Mot: G6A;GLC;GSF;GSH;GUB;GUC;GUD;GUE;GUF;TLB 1,1 ltr. OHV (HCS) 37-39 KW (50-53 PS)				
Fiesta/Escort 8/1988➔4/1992 Fiesta/Escort 4/1992➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*693.553*	