



Filter, Innenraumluft

Hinweis:

Der Innenraumluftfilterkasten befindet sich im Motorraum des Fahrzeuges auf der Beifahrerseite.

Ausbau:

Die Motorhaube öffnen und die Verschraubung des Innenraumluftfilterkastens lösen.

(Abb. 1)

Den Innenraumluftfilterkasten öffnen und den Filter entnehmen.

(Abb. 2)

Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

Auf richtigen Sitz des Filterelements achten!

Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!

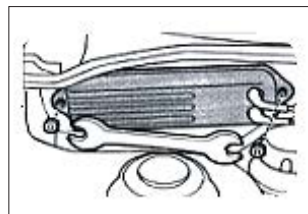


Abb. 1



Abb. 2





Filter, Cabin Air


Note:

The cabin air filter case is installed in the engine compartment at the co-driver's side.

Filter Replacement:

Open the hood and unscrew the cabin air filter case.

(pict. 1)

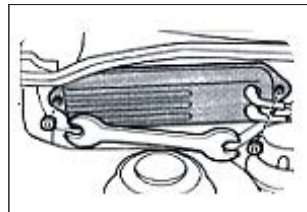

pict. 1

Open the filter case and take out the filter.

(pict. 2)



pict. 2

The installation is done in reverse sequence of replacement.

Take care about correct fitting of the filter!

Please think about the environment when you throwing away the old filter!

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original

