



## Filter, Innenraumluft

### Hinweis:

Der Innenraumluftfilterkasten befindet sich im Motorraum des Fahrzeuges auf der Beifahrerseite.

### Ausbau:

Die Motorhaube öffnen und die Verschraubung des Innenraumluftfilterkastens lösen.

(Abb. 1)

Den Innenraumluftfilterkasten öffnen und den Filter entnehmen.

(Abb. 2)

### Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

**Auf richtigen Sitz des Filterelements achten!**

**Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!**

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!


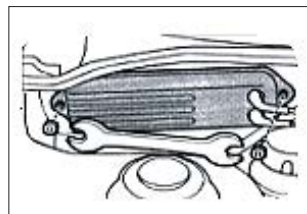


Abb.1



Abb.2



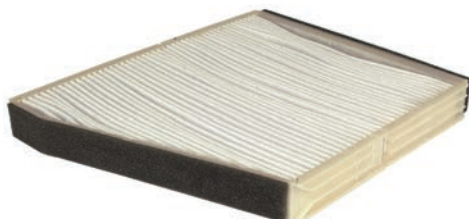

## Filter, Cabin Air


### Note:

The cabin air filter case is installed in the engine compartment at the co-driver's side.

### Filter Replacement:

Open the hood and unscrew the cabin air filter case.

(pict. 1)

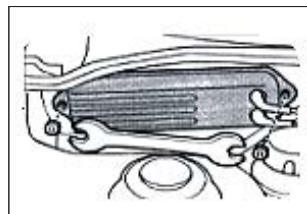

pict. 1

Open the filter case and take out the filter.

(pict. 2)



pict. 2

The installation is done in reverse sequence of replacement.

**Take care about correct fitting of the filter!**

**Please think about the environment when you throwing away the old filter!**

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

