



Filter, Innenraumluft

Hinweis:

Der Innenraumluftfilter befindet sich im Wageninneren, in Fahrtrichtung rechts hinter der Fußraumverkleidung.

Ausbau:

Den Bodenteppich umschlagen, die Filterabdeckung freilegen, den Steckverbinder abklemmen und die Abdeckung durch Lösen der Befestigungsschraube abnehmen.

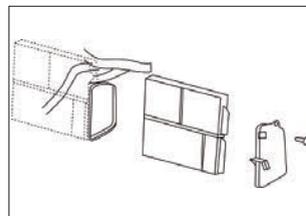


Abb.1

Die Filter nacheinander entnehmen.

(Abb. 1)

Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

Auf richtigen Sitz des Filterelements achten!

Bitte umweltfreundliche Entsorgung des Alteils gewährleisten!

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!






Filter, Cabin Air

Note:

The cabin air filter is installed inside the car at the right side behind the leg room floor covering.

Filter Replacement:

Remove the floor covering, unplug the connector and remove the cover of the cabin air filter case by unscrewing the fitting bolt.

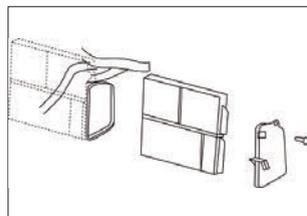

pict. 1

Take out the filters one by one.
(pict. 1)

The installation is done in reverse sequence of replacement.

Take care about correct fitting of the filter!

Please think about the environment when you throwing away the old filter!

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

