
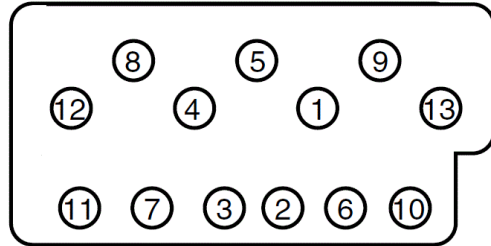


<b>Anziehvorschrift für Zylinderkopf</b>	<b>696.480</b>	
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>GM</b>
		Das Original

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	1985-1993&1992- 1995VIN W	1994-2014
* 65 ft-lb in three steps	* 22 ft-lb	<ul style="list-style-type: none"> <li>➤ Long bolts 75°</li> <li>➤ Medium bolts 65°</li> <li>➤ Short bolts 55°</li> </ul>

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

1985-2014 4.3L V6 262cid  
Chevrolet Blazer, Astro, C10, C20, K10, K20, R10  
GMC Silverado 1500, Jimmy, K1500, K2500,  
GMC Savana, Sierra, Sonoma  
ISUZU Hombre  
Oldsmobile Bravada  
Pontiac Bonneville, Grand Prix, Parisienne

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*696.480\***