
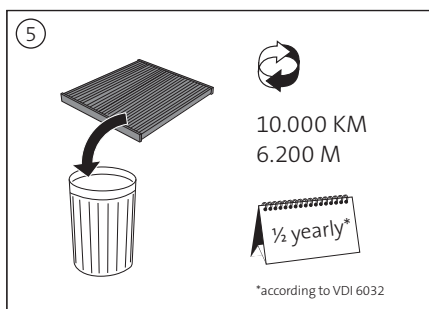
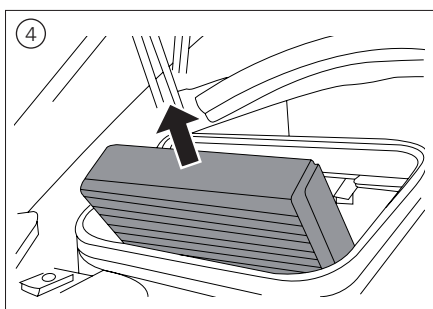
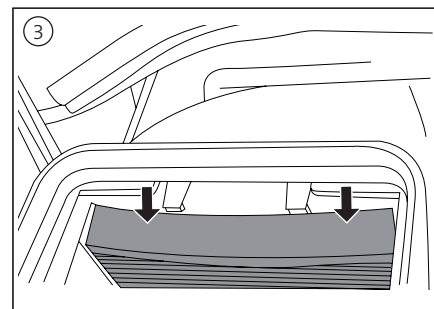
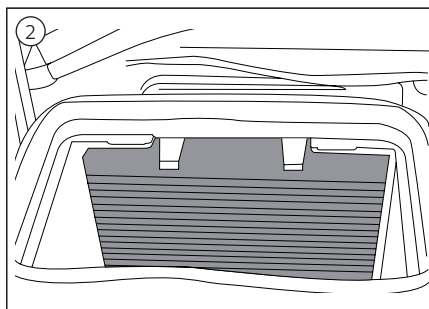


FITTING INSTRUCTIONS
EINBAUANLEITUNG
INSTRUCCIONES DE MONTAJE
NOTICE DE MONTAGE
ISTRUZIONI DI MONTAGGIO
INSTRUKCJA MONTAŻU
INSTRUÇÕES DE MONTAGEM
ИНСТРУКЦИЯ ПО УСТАНОВКЕ

Dodge Sprinter 06.05 →
Mercedes-Benz Sprinter 06.05 →
Volkswagen Crafter LT 3 06.05 →

micronAir® blue

BL677
CB1233

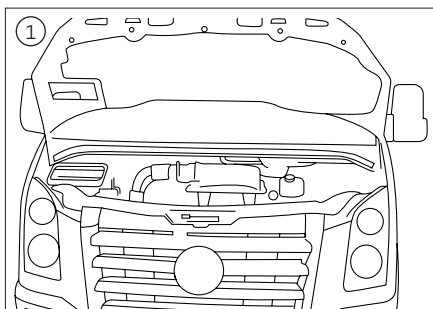

03-CA-532-December-2017-ML

a brand of

 **FREUDENBERG**

 **CORTECO**