
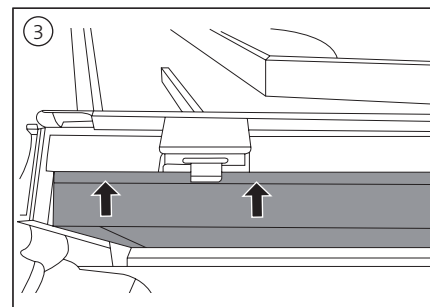
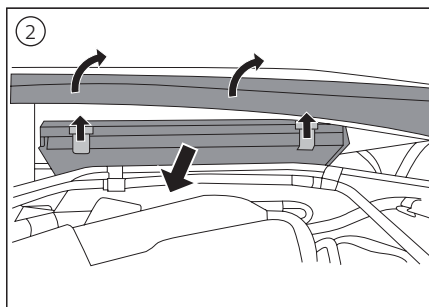


FITTING INSTRUCTIONS  
 EINBAUANLEITUNG  
 INSTRUCCIONES DE MONTAJE  
 NOTICE DE MONTAGE  
 INSTRUZIONI DI MONTAGGIO  
 INSTRUKCJA MONTAŻU  
 INSTRUÇÕES DE MONTAGEM  
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

Opel Combo 09.01 →  
 Opel Corsa 09.00 →  
 Opel Signum 04.03 →  
 Opel Tigra Twin Top 07.04 →  
 Opel Vectra 03.02 →  
 Saab 93 09.02 →

**micronAir® blue**

BL607  
 CB1092

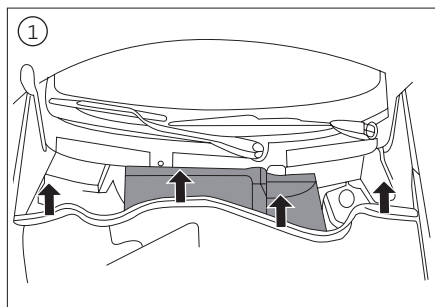

10.000 KM  
 6.200 M  
 1/2 yearly\*  
 \*according to VDI 6032

03-CA-532-December-2017-ML