

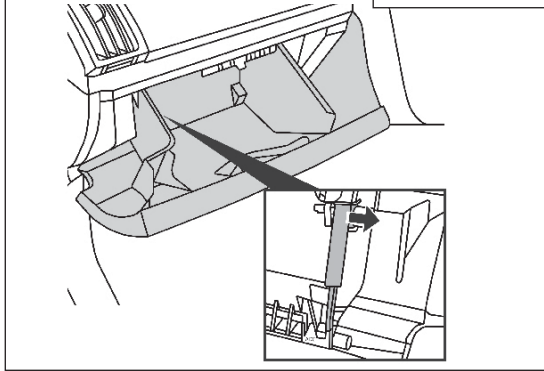


Land Rover


1

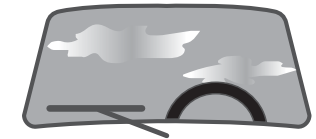


20'

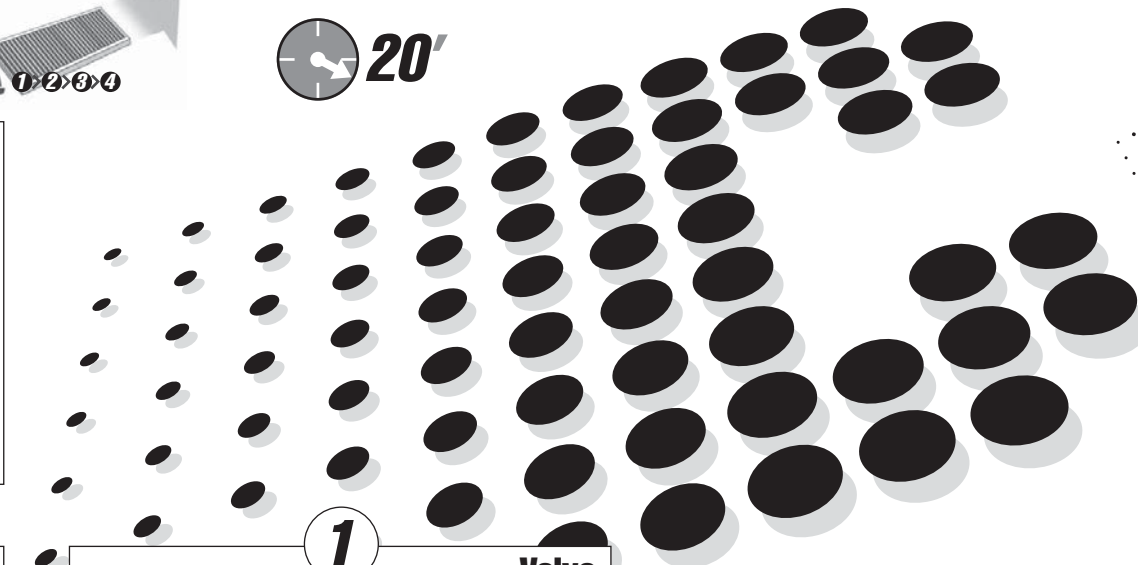

2

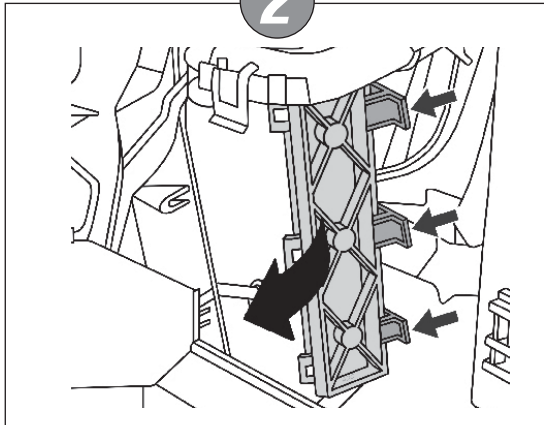

1

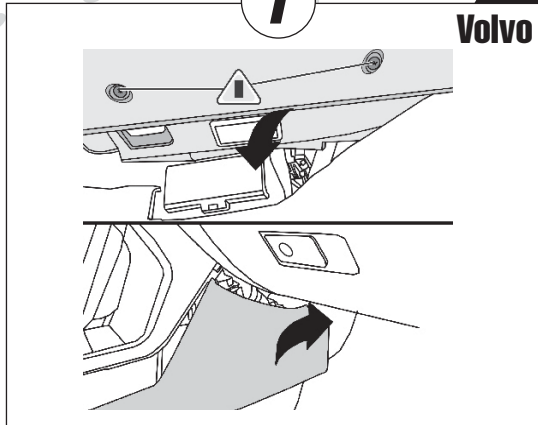


Volvo

filter **NC2354**


**Land Rover
Freelander II (10/06→)**

**Volvo
S 80 (03/06→)
V 70 (08/07→)
XC 60 (05/08→)
XC 70 (02/07→)**

3

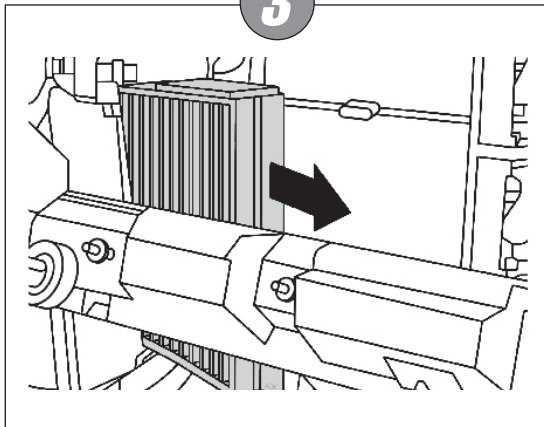


2

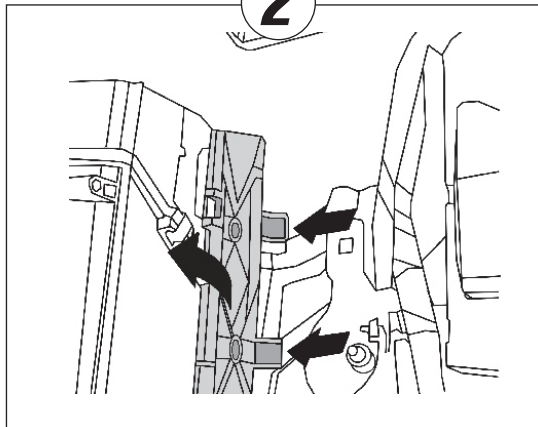

4

3

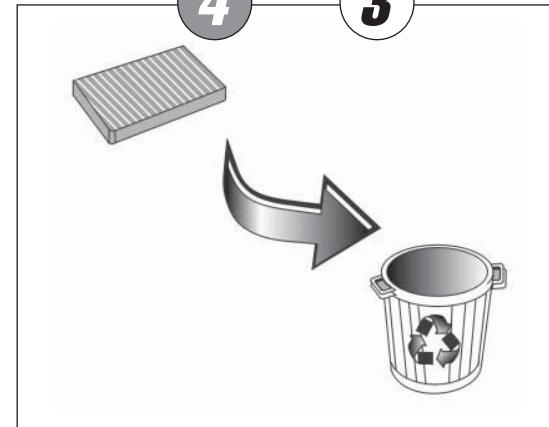

Per il montaggio procedere eseguendo le operazioni in senso inverso.
Continuomounting in reverse order of operations
Le remontage s'effectue dans l'ordre inverse.
Der weitere Einbau erfolgt in umgekehrter Reihenfolge
Para concluir la instalaci3n, seguir el orden inverso.

