

Montageanleitung | Installation Instruction | Notice de montage

Istruzioni di montaggio | Instrucciones de montaje

Instruções de montagem | Installationsanvisning | Montagehandleiding

de Innenraumfilter

en Cabin filter

fr Filtre d'habitacle

it Filtro abitacolo

es Filtro ventilación para interior

pt Filtro de cabine


sv Kupéfilter

nl Interieurfilter

6000161887





BOSCH



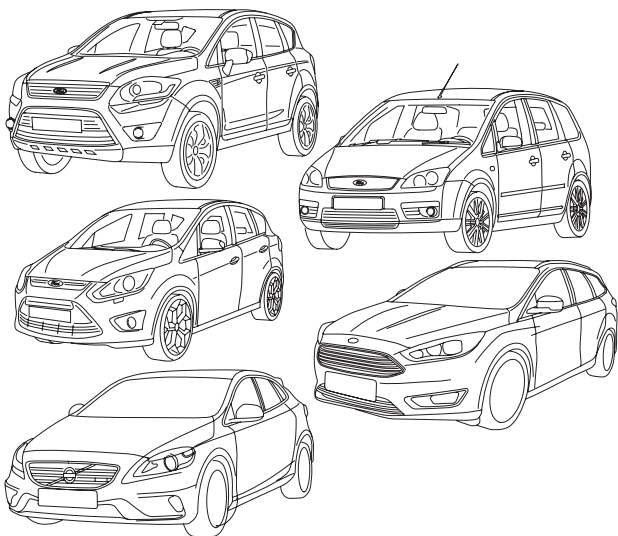


0 986 628 638



Ford Kuga	03.10 -->
Ford C-Max (CB7)	10.03 --> 03.07
Ford C-Max II	12.10 -->
Ford Focus [CEW, CB8]	01.11 -->
Volvo V40 [535, 536]	03.12 --> 07.19




20 min.

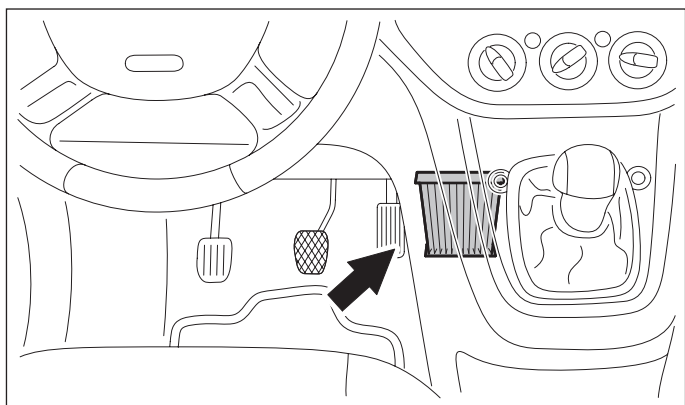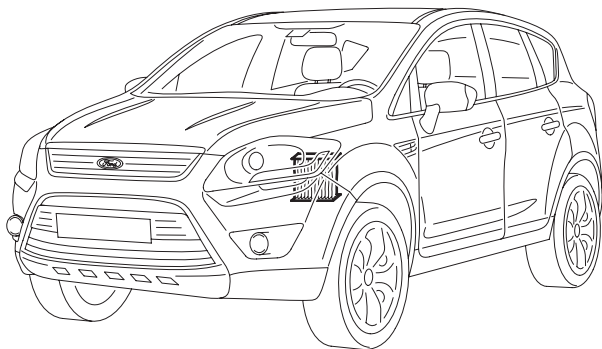


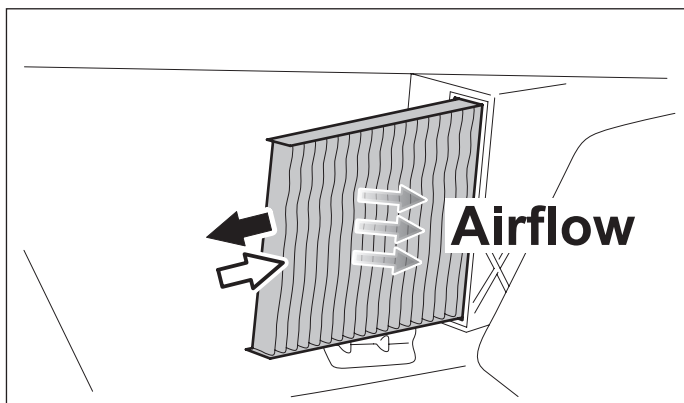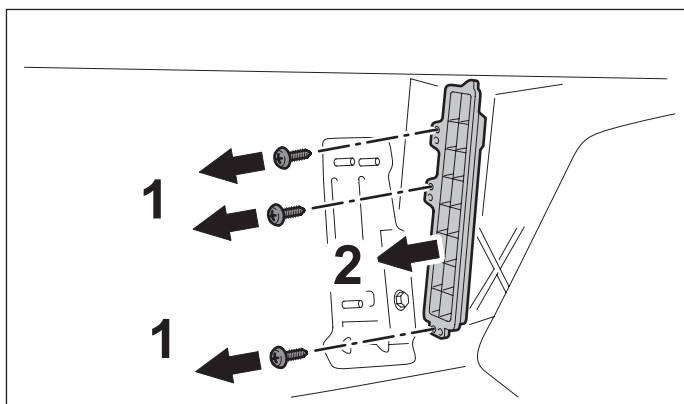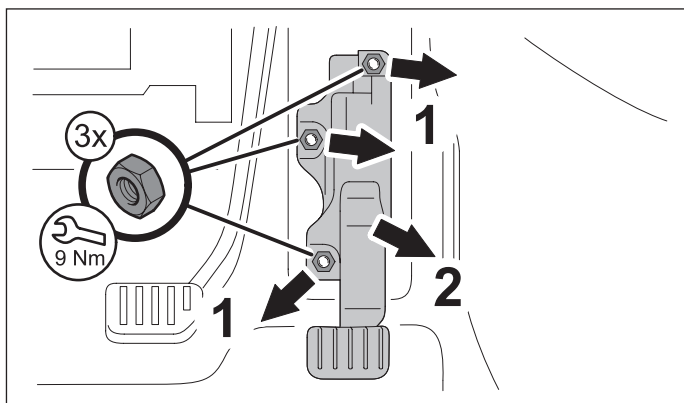

20 min.

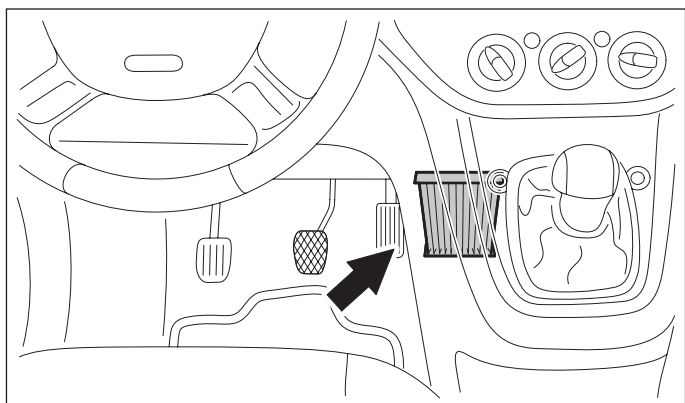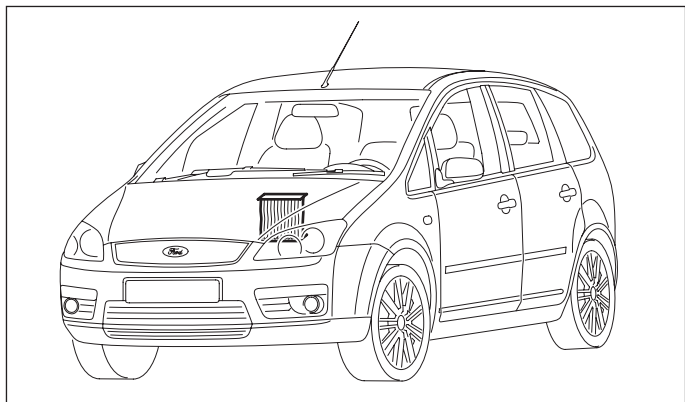

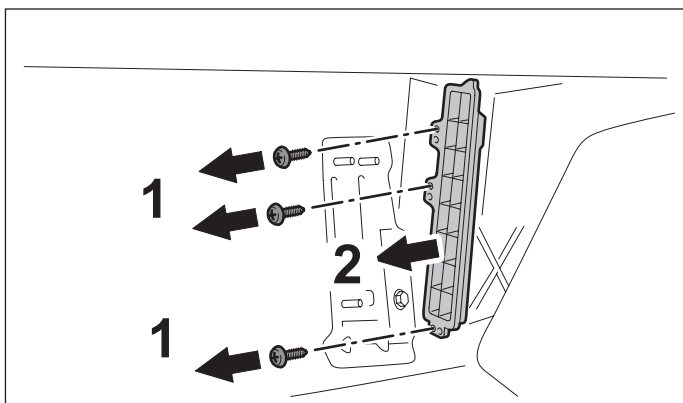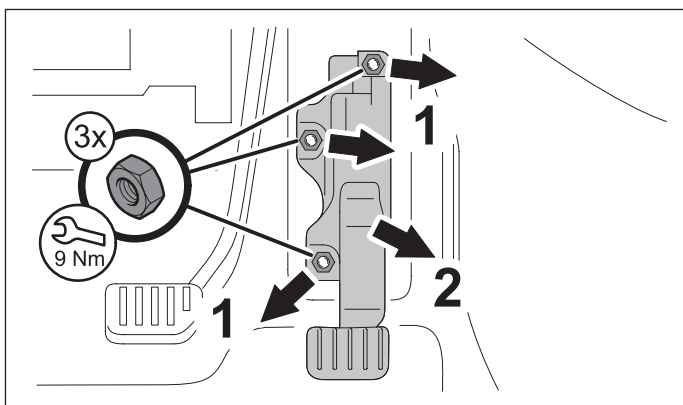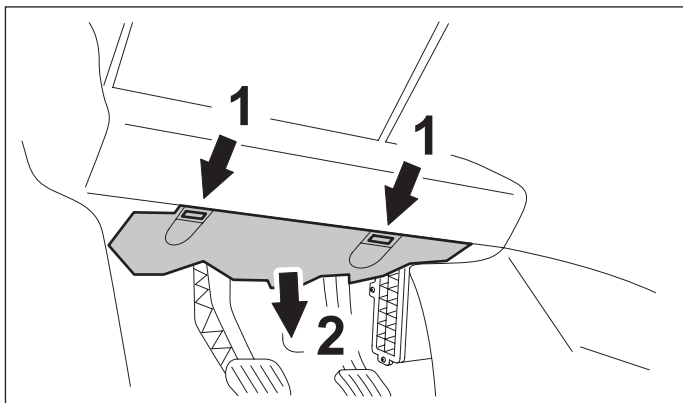

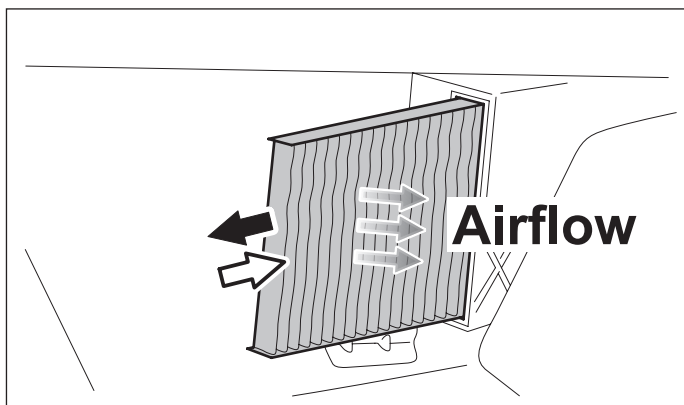

15 min.

