

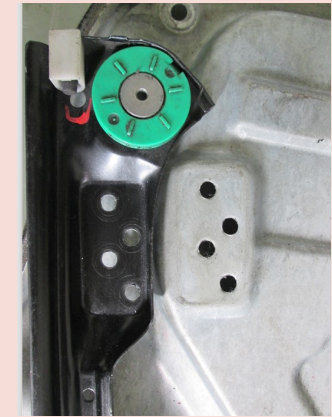


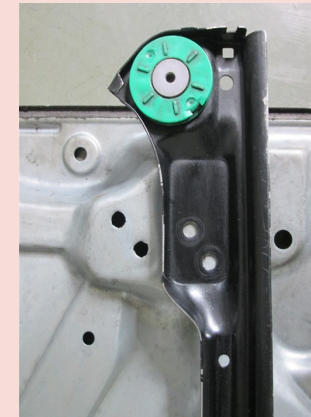


## Einbauhinweis/installation instruction VW Transporter T5 2003 – 2015

Vorne rechts/Front right (OE Ref. No. 7H0 837 754)

### Schritt 1/Step 1

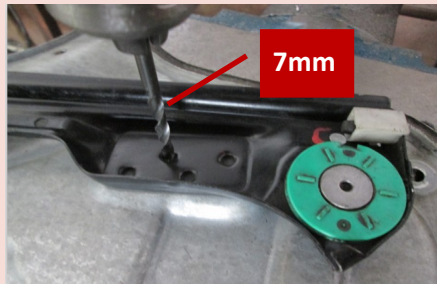

### Schritt 2/Step 2

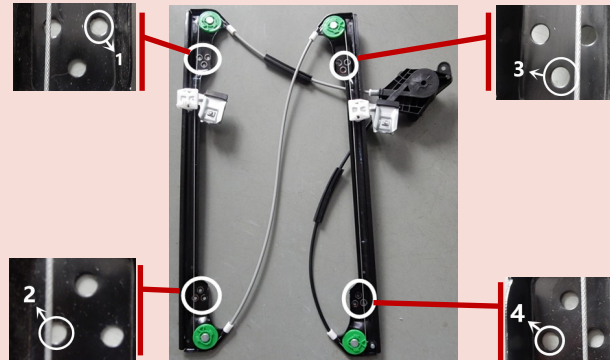

### Schritt 3/Step 3

