



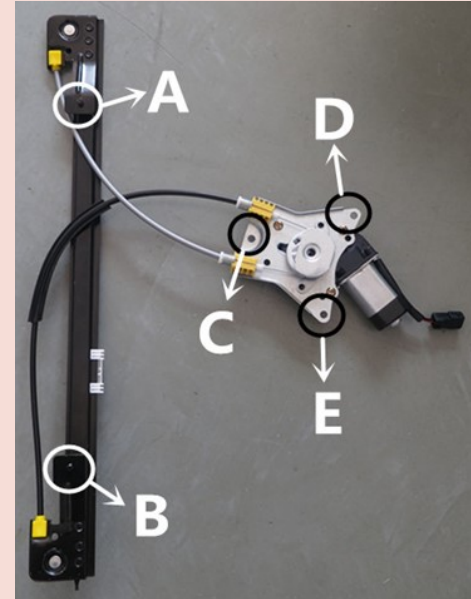

Einbauhinweis/installation instruction Citroën/Fiat/Peugeot 1995-2006

Vorne links/Front left (OE Ref. No.: 9221.F7/ 14624 45080)

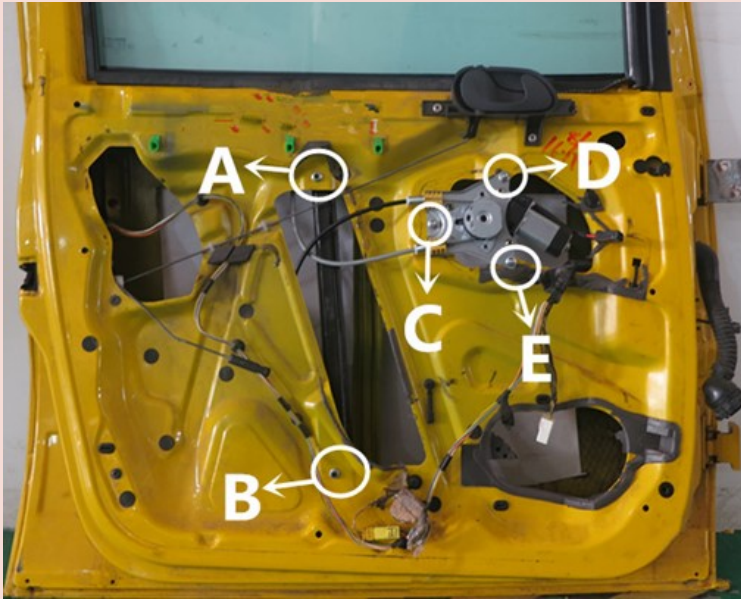

Vorne rechts/Front right (OE Ref. No.: 9221.F5/ 14624 44080)

